


Cross Sectional Tolerances for Sponge Rubber Extrusions

MEAS. IN INCHES ABOVE - INCLUDED	TOLERANCE
.125 - .50	+/- 0.032
.50 - 1.0	+/- 0.050
1.0 - 2.0	+/- 0.080
2.0 - 3.15	+/- 0.125
3.15 & up	+/- 8%

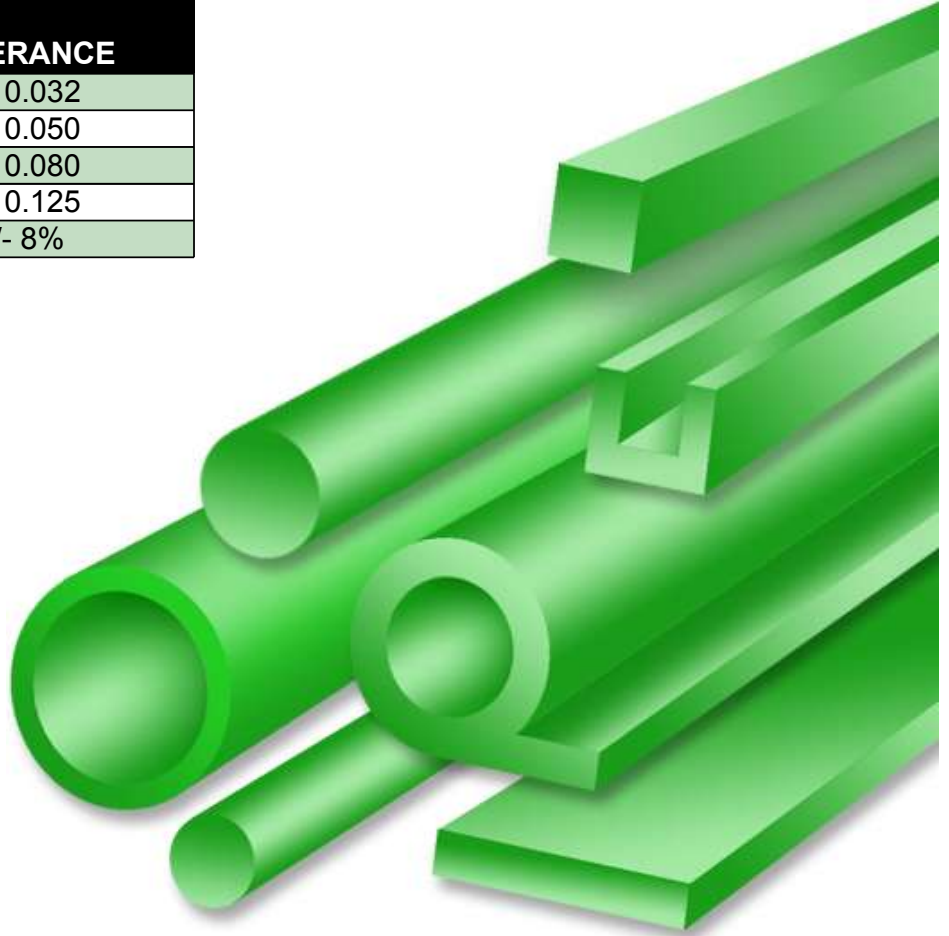

RUBBERMILL

Disclaimer: The information contained in this document is to be used as a guide only. RubberMill cannot guarantee the accuracy, or be held responsible for the information's end use.

Talk to a person... not a machine! • 336-622-1680 • www.rubbermill.com